

AMBRO[®] CONTROLS

For full range visit
ambrocontrols.com

OXYGEN

FIRE/EXPLOSION HAZARD/CONTENTS UNDER PRESSURE/OXIDIZER

- Contains oxygen under pressure which can enlarge and may cause an explosion or serious burns.
- To reduce chance of leak, fire, or explosion read the instructions on this cylinder
- This cylinder is designed for Oxyset part 1811168.
- Do not use this cylinder designed for oxy-acetylene set ups


WARNING:

- Dispose of the container only if completely empty (not under pressure), (P501 take it to the waste collection center). (Read the gas Safety Data Sheet (MSDS) carefully, available on the website ambrocontrols.com, before use)
- Open the valve slowly.
- Do not look into the valve hole. Do not bring the valve and the cylinder close to the eyes and face.
- Do not insert screwdrivers, nails, iron wire or other sharp tools into the valve hole.
- Do not put the valve in your mouth.
- DO NOT INHALE.
- Do not damage the cylinder. It is forbidden to drag, roll, drop or overturn the cylinder. It is also forbidden to throw the cylinder.
- Do not use the cylinder to hit or beat another part.
- Do not use the cylinder as a support, work surface or stop.
- Never attempt to repair, weld, puncture or modify cylinders. Periodically check the integrity and safety of the cylinder.
- Wear work shoes with a metal toe and non-slip sole and high-grip gloves when handling the cylinder.
- Do not use for the propulsion of means of transport, including those for sports and entertainment.
- DO NOT REMOVE THIS LABEL!

BEFORE USE:

1. Read and follow all instructions in torch owner's manual and on fuel gas cylinder.
2. Check cylinder and torch seals. Never use with damaged or missing seals. Discard cylinder if dirt or rust particles are in valve area.
3. Turn off torch.
4. Attach cylinder outdoors away from pilot lights, flames, sparks, and other ignition sources.
5. Attach cylinder away from highly combustible materials, especially grease or oil. Never put oil or grease on any part of cylinder or torch. Escaping gas can ignite these materials without flame or spark.
6. Screw clockwise to attach oxygen cylinder to oxygen regulator
7. Hand tighten only. Over-tightening will damage seals or threads.
8. Check for leaks by putting soapy water on connections and looking for bubbles.

OXYGEN

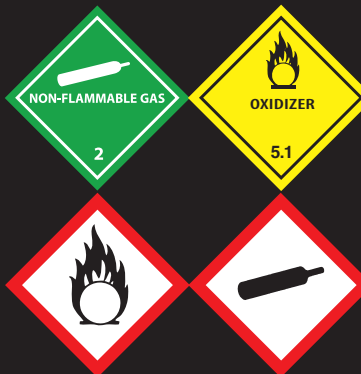

OXYGEN COMPRESSED, UN 1072

NET VOLUME

Contents: 7.38 ft³ (209L)

WP: 1585 PSI (110 BAR)

Fitting: M12x1

W.C.: 0.50 gallons

Net weight: 10.6 oz (300g)

ambrocontrols.com

OXYGEN

DURING USE:

1. Use only with torches designated for oxygen gas.
2. Use only in well ventilated areas.
3. Never use near pilot lights, flames, sparks, and other ignition sources.
4. Never use near highly combustible materials, such as oil and gas.
5. Do not inhale cylinder contents. Gas in cylinder is not approved for internal or medical use.

AFTER USE

1. Turn off torch. Let cool
2. Detach torch when not in use.
3. Detach and store away from pilot lights, flames, and sparks. Escaping gas can enlarge existing fires.
4. Replace cap to keep valve clean.

HANDLING & STORAGE

1. Keep out of reach of children.
2. Never expose cylinder to heat, sparks, or flame. Never leave in direct sunlight. Never store at temperatures above 120°F (49°C).
3. Never store in living spaces.
4. Never refill this cylinder. Refilling may cause explosion. Federal law forbids transportation if refilled - penalty up to \$500,000 and 5 years imprisonment (49 U.S.C. 5124).
5. Never put in luggage or take on trains or aircraft.
6. To discard, contact local refuse hauler or recycle centre. Never put in fire or incinerator. Do not puncture.
7. Do not handle until all safety precautions have been read and understood.
8. Keep/Store away from combustible materials, clothing.
9. Keep valves and fittings free from oil and grease.
10. Use and store only outdoors or in a well-ventilated place.
11. Do not smoke when using the cylinder.

WARNING: This container and by-products of the combustion of its contents contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

NOT FOR MEDICAL USE

INDEX N. 008-001-00-8

C.A.S. No. 7782-44-7

DO NOT REMOVE OR DEFACE THIS LABEL

PART NO. 1811325
MADE IN ITALY

AMBRO CONTROLS
18 Technology Drive
Irvine California 92618
US: 858 779 0377
ambro@bromic.com



PW 110 PH 165 BAR 1.9L

EN ISO 11118:2015 I 

TT 0426

NON RICARICARE - DO NOT REFILL